



Protects Piping Insulation

Installation Instructions

- 1 Measure line-set from Condensing Unit to wall outlet and cut E-FLEX GUARD™ to length.
- 2 Wrap E-FLEX GUARD™ Insulation Protector around line-set making sure pre-loaded Velcro fasteners are fully enclosed. Ensure seam faces toward the bottom for improved aesthetics.
- 3 Secure around flexible elastomeric sleeve with enclosed stainless steel hose clamp. Tighten for proper seal and security.

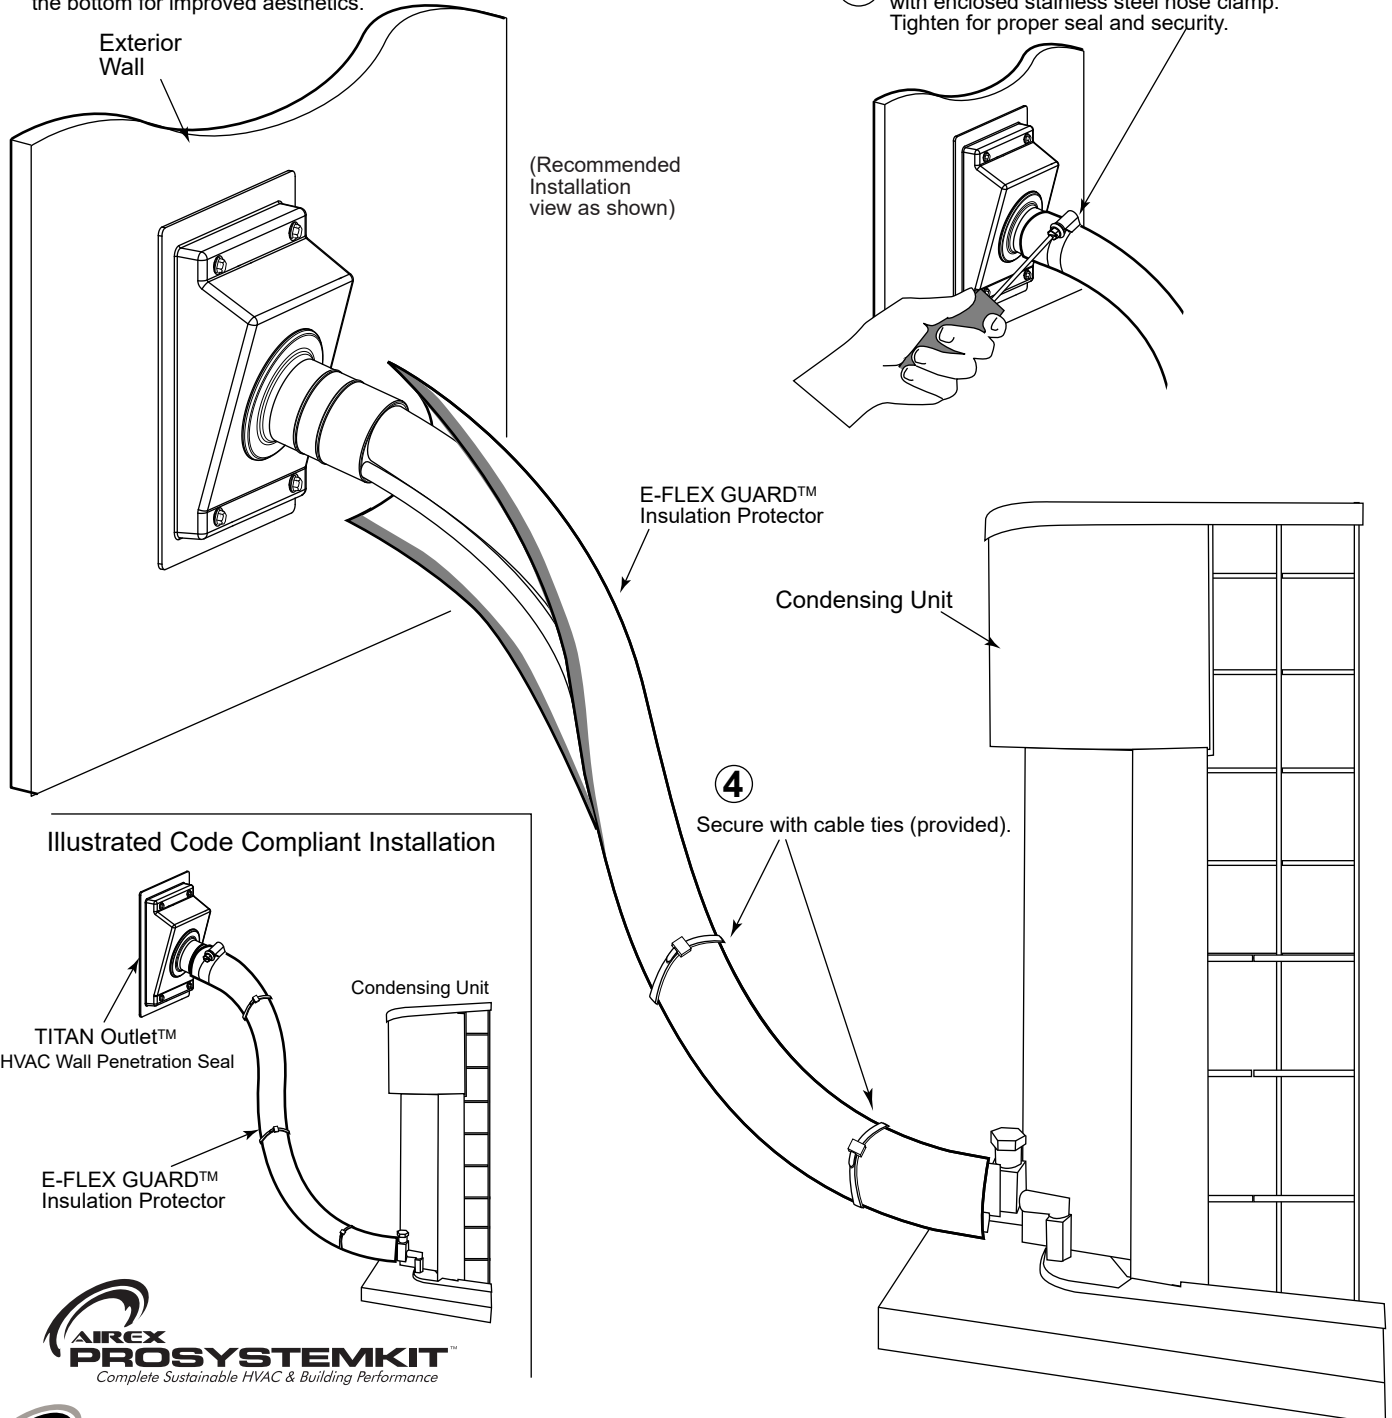

Illustrated Code Compliant Installation

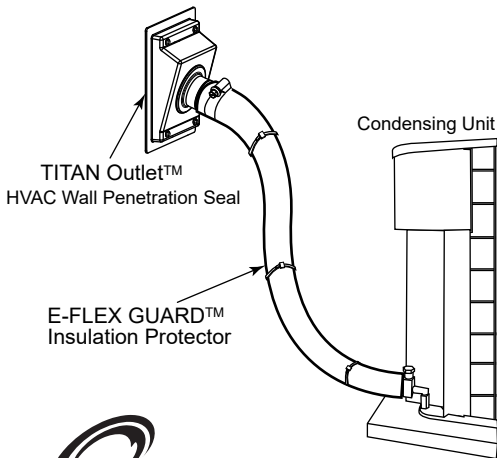

**AIREX
PROSYSTEMKIT™**
Complete Sustainable HVAC & Building Performance